
OVEN PARTSFor Models:KEMS378SBL02, KEMS378SWH02, KEMS378SS02 (BLACK) (WHITE) (STAINLESS)

Illus	. Part		l IIIus.	. Part		IIIus	. Part	
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.		DESCRIPTION
1	8304337 W10162223 W10162181 W10185205 W10185206 8304338 8304375 9762761 W10065852	Microwave Tech Sheet English French Easy Set Guide Oven Microwave Safer Cooking Tips English	7 8 9 10 11 12 13 14 15 16 17 18 19 20	4449809 4452158 W10169756 W10009940 W10169757 3400832 8304629 8304494 3196176 4449040 3400893 4451477	Tube, Vent Lens, Light Assembly, Oven Light Bulb, Light Screw (2) Frame, Front Gasket, Door Screw Screw	29 30 31 32 33 34 35 36	8303772 8304478 8303517 8303706BL 8303706WH W10165444	Vent, Center Base, Chassis Retainer, Gasket Cover, Back Trim, Bottom Black White Stainless Grommet, Mounting Rail Bracket, Thermostat
2 3 4 5 6	W10153090 4455606 4455605 W10105790	Bracket, Base Hinge Receiver Right Left Bumper, Door (2) Exhaust, Vent Slope	22 23 24 25 26 27	8303679BL 8303679WH 8303680BL 8303680WH 8303692 4449743 4449748 4455641 8304304	Mounting Rail,Side Right Black White Left Black White Latch, Motorized Screw	INS	NOT ILL SULATION 8303966	VING PARTS LUSTRATED Insulation, Wrap Insulation, Back


CONTROL PANEL PARTS

For Models:KEMS378SBL02, KEMS378SWH02, KEMS378SSS02 (BLACK) (WHITE) (STAINLESS)

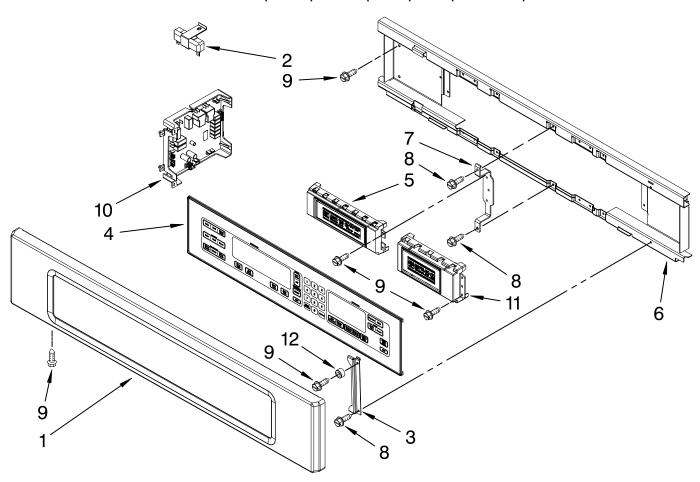


Illus	. Part	
No.	No.	DESCRIPTION
1		Panel, Control
•	8303717BL	,
	8303717WH	
	W10165446	Stainless
2	8304441	
3	8303797	Bracket, Glass
		Touch
4	8303881	Keyboard,
		Glass Touch
5	W10118734	Oven, User
		Interface
6	8303720	Backer, Control
7	8303887	Bracket, Enclosure
8	4449154	Screw
9	3400832	Screw
10		Appliance Manager
11	W10118735	Microwave, User
		Interface
12	9760749	Bumper

OVEN DOOR PARTSFor Models:KEMS378SBL02, KEMS378SWH02, KEMS378SSS02 (BLACK) (WHITE) (STAINLESS)

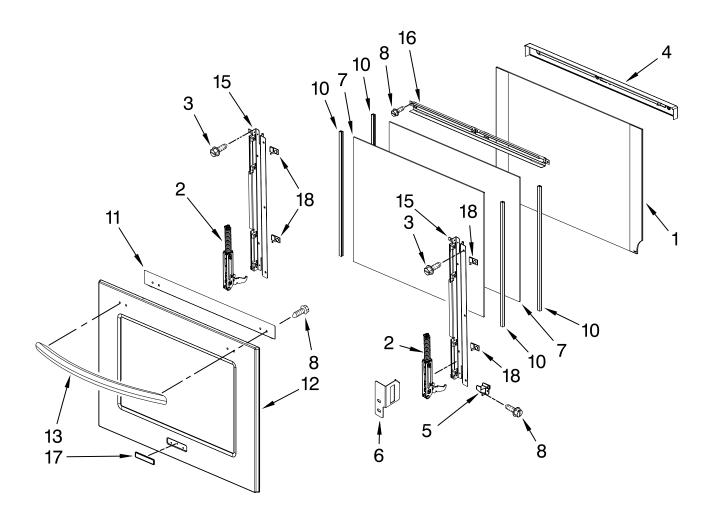


IIIus No.		DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus No.		DESCRIPTION
1		Door Liner	7	8303732	Glass, Inner	13		Door Handle
2	W10174288	Hinge, Door (2)	8	4449154	Screw		8303775BL	Black
3	3196183		10	8304523	Seal		8303775WH	White
4	8304580BL	Vent, Door Top	11	8304361BL	Bracket, Handle		8303775SS	Stainless
5		Bracket, Door	12		Door Glass,	15	8303745BL	Frame, Door Side
	8304377	Right			Assembly	16		Door, Top Bracket
	8304378	Left			Includes #17	17		Badge
6		Cover, Hinge		8304001	Black		8304603BL	Black
	W10137044			8304003	White		8304603WH	White
	W10137043	Left		8303999	Stainless		8304603SS	Stainless
						18	8304522	Bumper, Glass

INTERNAL OVEN PARTS
For Models: KEMS378SBL02, KEMS378SWH02, KEMS378SS02 (BLACK) (WHITE) (STAINLESS)

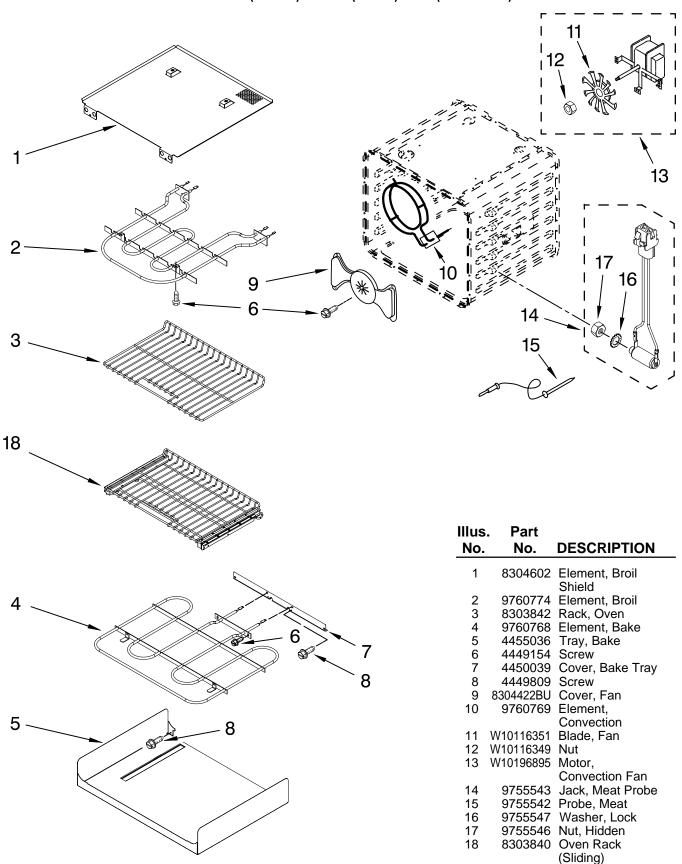


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS
For Models: KEMS378SBL02, KEMS378SWH02, KEMS378SS02 (BLACK) (WHITE) (STAINLESS)

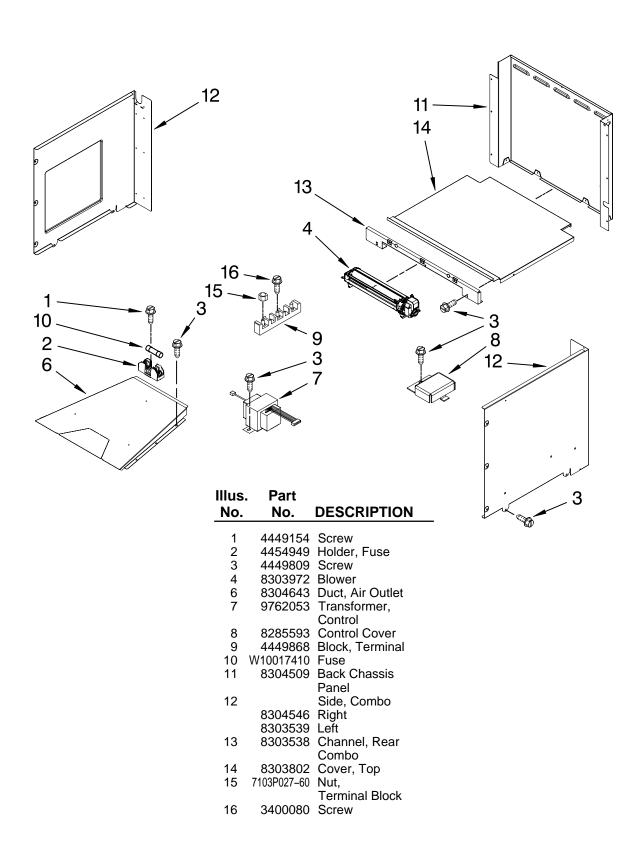

CABINET AND STIRRER PARTS

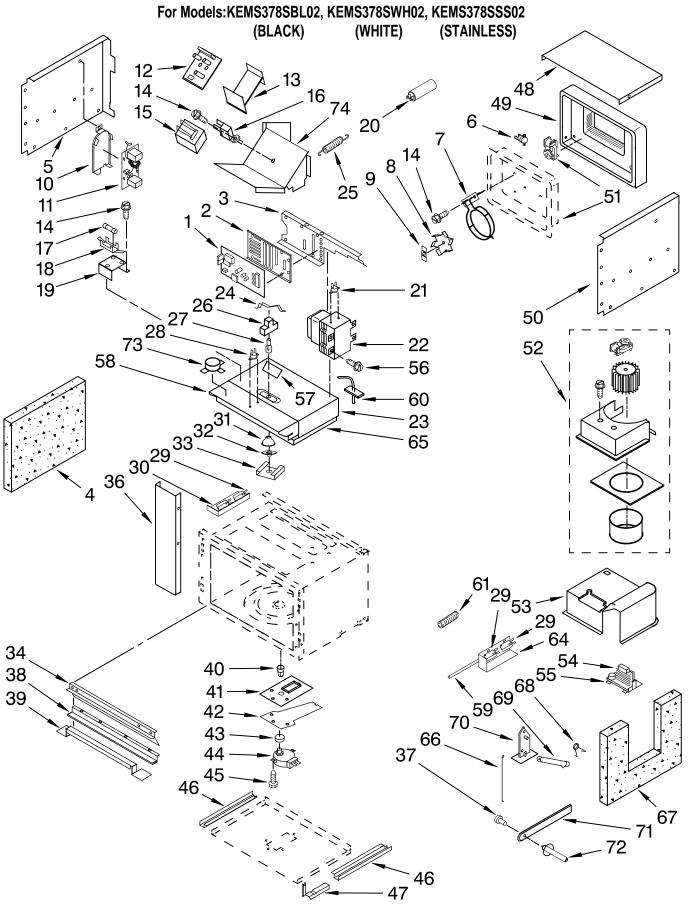


CABINET AND STIRRER PARTS

For Models:KEMS378SBL02, KEMS378SWH02, KEMS378SSS02 (BLACK) (WHITE) (STAINLESS)

IIIus No.	. Part No.	DESCRIPTION	Illus No.		DESCRIPTION	Illus No.		DESCRIPTION
140.	140.	DESCINII HON	-140.	140.	DESCINII HON	140.	140.	DESCINII HON
1	W10120227	Control, Electric	23	W10130895	Plate, Air	49	W10130904	Cover, Rear
2	8205669		24	4375319	Spring, Lamp	50		Cover, Side Right
3	W10130892		25	8205685		51	W10120221	
4	W10130901		26	8205658	Housing, Lamp			Assmebly
		Left	27	4375348	Lamp	52	8205721	Blower Assembly
5	W10120471	Cover, Side Left	28	W10120222	Thermostat	53		Cover, Inverter
6	W10120223	Thermostat	29	W10131248	Switch	54	W10120229	
7	W10120224	Element,	30	8205683	Holder, Switch	55	W10130906	Holder, Inverter
		Convection	31	4375320	Reflector	56	W10130890	
8	4375418		32	4375318	Lens, Lamp	57	W10130908	Baffle, Air
9	W10120233	Nut, Speed	33	W10120231	Clip, Spring	58	W10130899	Plate, Air
10	W10130891	Holder	34	W10120476		59	W10120235	Rod, Release
11	W10120220	Noise Filter	36		Trim, Side	60	W10120225	
12	W10120228	Control, Electric		W10120472	Right	61	8205685	Spring
		Converter		W10120474	Left	64	8205683	Interlock
13	W10130909		37	W10120469		65	W10130900	
14	W10131249	Screw	38		Bracket, Support	66	8205704	Spring
15		Transformer	39		Bracket, Support	67	W10130902	Insulation
16	4375427	Actuator	40	8205682	Shaft, Turntable	68	8205689	Spring
17	4375321	Fuse			Turntable	69	8205688	Arm
18	4375231		41	8205681	Cover, Motor	70	8205686	Support
19	W10130897	Bracket, Support			Turntable	71	W10120236	Arm
20	8205653	Filter, Noise	42	W10120234		72	W10120470	Pin, Damper
21	8205654	Thermostat	43		Gasket, Shaft	73	8205690	Sensor
22	W10120113	Magnetron	44		Motor, Turntable	74	W10130898	Duct, Magnetron
			45	4375202				-
			46	8205707				
			47		Hinge, Door			
			48	W10130903	Cover, Plate	l		


INTERNAL MICROWAVE PARTS For Models: KEMS378SBL02, KEMS378SWH02, KEMS378SS02

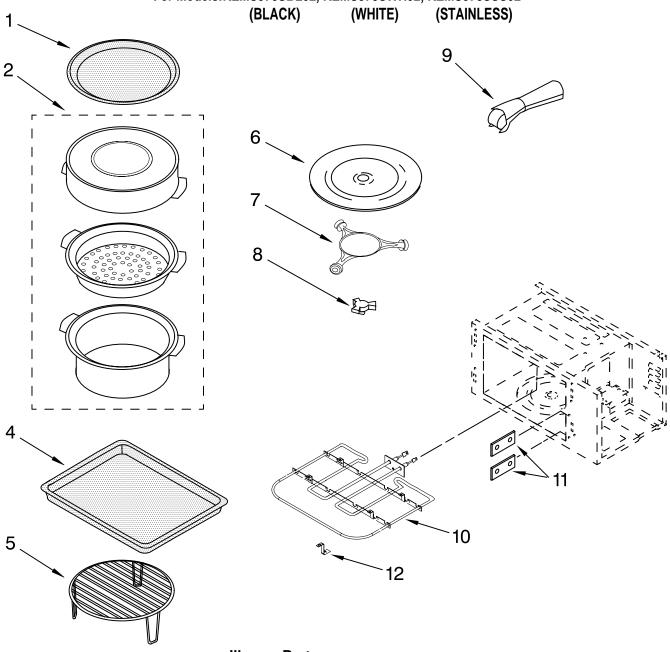

Illus.	Part	
No.	No.	DESCRIPTION

- W10120480 Crisp Plate
- W10120484 Steamer W10120486 Plate, Baking
- 5 W10120483 Rack
- 6 8205676 Turntable
- 8205678 Ring
- 8205677 Drive, Turn Table
- 9 W10120481 Handle, Pan
- 10 W10120226 Grill Heater
- 11 W10120230 Cover, Plates (2)
- 12 W10120232 Bracket, Mounting

MICROWAVE DOOR PARTS
For Models: KEMS378SBL02, KEMS378SWH02, KEMS378SSS02 (BLACK) (WHITE) (STAINLESS)

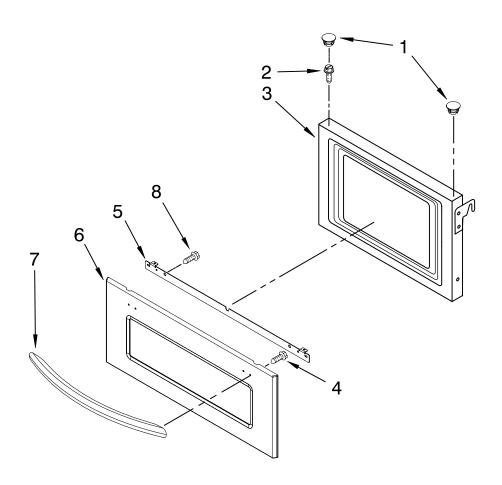

Illus. No.	. Part No.	DESCRIPTION
1	8304588BL	Button, Plug (2)
2	4449809	, 5 ,
3	W10120488	Door, Microwave
4	4449154	Screw (4)
5	8303033	Bracket, Handle
6		Glass Assembly
	8304030	Black
	8304031	White
	8304029	Stainless
7		Handle, Door
	8303775BL	Black
	8303775WH	White
	8303775SS	Stainless
8	W10143304	Screw

OPTIONAL PARTS (NOT INCLUDED)

For Models:KEMS378SBL02, KEMS378SWH02, KEMS378SSS02 (BLACK) (WHITE) (STAINLESS)

Illus. Part

No. No. DESCRIPTION

PAINT, TOUCH-UP (1/2oz.)

72017 White 261869 Cord Brown 72032 Black

PAINT, SPRAY

350930 White 261900 Citrine White 830864 Black

ADHESIVE

591014 Adhesive Loctite (1/3 oz.) 482338 Sealer, Silastic (3 oz.)

FOLLOWING PARTS NOT ILLUSTRATED

WIRING HARNESS PARTS

W10143473 Harness,
Door Latch
8304052 Harness,
User Interface
4452400 Lead, Ground
4449809 Screw
W10171567 Harness, Main
W10155291 Ground, Microwave
4450800 Screw, Ground
4449809 Screw

Miscellaneous

4448950 Screw, Install (4)

8304440 Conduit, Combo